

Numbering of inputs, outputs and digits at Master Cards connected to a USB Expansion card

Inputs at J3 and J4 on Master Card

| | | | | |
|--------------|-----------|-----------|-----------|-----------|
| MasterCard 1 | J3 | 0 - 35 | J4 | 36 - 71 |
| MasterCard 2 | J3 | 72 - 107 | J4 | 108 - 143 |
| MasterCard 3 | J3 | 144 - 179 | J4 | 180 - 215 |
| MasterCard 4 | J3 | 216 - 251 | J4 | 252 - 287 |

Outputs at J2 and P2 on Master Card

| | | | | |
|--------------|-----------|-----------|-----------|-----------|
| MasterCard 1 | J2 | 11 - 48 | P2 | 49 - 55 |
| MasterCard 2 | J2 | 75 - 112 | P2 | 113 - 119 |
| MasterCard 3 | J2 | 139 - 176 | P2 | 177 - 183 |
| MasterCard 4 | J2 | 203 - 240 | P2 | 241 - 247 |

Digits at Display cards connected to J1 on Master Card

Master Card 1

| | |
|----------------|---------|
| Display Card 1 | 0 - 15 |
| Display Card 2 | 16 - 31 |
| Display Card 3 | 32 - 47 |
| Display Card 4 | 48 - 63 |

Master Card 2

| | |
|----------------|-----------|
| Display Card 1 | 64 - 79 |
| Display Card 2 | 80 - 95 |
| Display Card 3 | 96 - 111 |
| Display Card 4 | 112 - 127 |

Master Card 3

| | |
|----------------|-----------|
| Display Card 1 | 128 - 143 |
| Display Card 2 | 144 - 159 |
| Display Card 3 | 160 - 175 |
| Display Card 4 | 176 - 191 |

Master Card 4

| | |
|----------------|-----------|
| Display Card 1 | 192 - 207 |
| Display Card 2 | 208 - 223 |
| Display Card 3 | 224 - 239 |
| Display Card 4 | 240 - 255 |